

# Installation manual hood lift MX5 Typ NC

## Art.Nr. NC0-5161



Open the bonnet and remove the cable fixing as shown in pic 1.

Remove the fixing screws shown in pic 2.

Mount the long metal bars to these positions using the supplied screws. (pic 3).


The second fixing for the metal bar is the location freed up by the removal of the cable fixings. Using the supplied plastic pegs, firstly fit them to the bar and then insert into the hole in the wing. Give the head of the peg a sharp tap with a hammer to spread the end of the fixing.



Mount the bonnet lifter fixings to the bonnet.

Insert the fixing on the metal small metal bracket into the existing hole as illustrated in Pic 4

Locking the bracket on the pin on the bonnet and turn the screw until firm (pic 5).

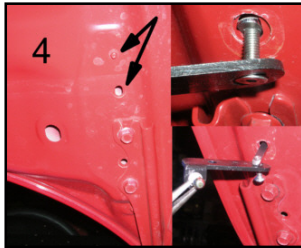

Pic 4



Pic 5

Remove the locking pins from the socket ends of the gas rams and locate the rams onto the ball fittings on the brackets. Once fitted, replace the locking pins.

The body of the ram should be uppermost with the shaft pointing down..

Plug the wiring loom into the hole in the metal bracket.

