

Flyin' Miata

We make Miatas fly!



499 35 Road
Palisade, CO 81526
E-mail: tech@flyinmiata.com

970-464-5600
(TECH & PRODUCT INQUIRIES)

800-FLY-MX5S (1-800-359-6957)
(ORDERS ONLY)

1999 Flyin' Miata dual exhaust installation

Congratulations on your purchase of a Flyin' Miata dual exhaust system! Your exhaust features all stainless steel construction and should keep a smile on your face for years. Start by backing the car up on ramps or supporting it with jack stands. Spray the exhaust hangers with silicone spray and the nuts with WD40, then remove the two nuts holding the muffler to the front pipe. Slip the hangers off and remove the stocker. Watch out, it's a heavy beast!



Measure 1&3/8" from the black plastic inner bumper support on the driver's side (see pic) and mark edge of bumper (on outside). Cut out the bumper template and stick it to the bumper with the more rounded edge lining up with your mark, pointy end of template out toward fender. Take a look at the stock cut-out on the other side of the car to make sure you have the right idea. Once you are comfortable that you have the template in the right spot

(remembering that you cannot uncut a hole), use a hand held saw blade or a small sabre saw (we use a battery powered Makita sabre saw with a fine blade). Make your cut, run your thumbnail over the edge when you're done to remove the little pieces that stick, and the horrifying part is done. If you have the proper touch up paint, you can apply it now.


You must remove one bolt holding the left end of the stock heat shield (see pic below), and then install the provided bracket for the additional rubber hanger.



Spray some silicone on the rubber hangers, install the new rubber hanger on the additional mount and spray it, then hang the new muffler.

If you are installing a normally aspirated set of duals, re-use the stock ring gasket. If you are installing turbo duals or are also installing our intermediate pipe, install the new gasket (provided) and bolt the new muffler on. Torque bolts to about 30 lb/ft. Fire the car up, check for exhaust leaks, (correct if necessary) and you're ready to go HAVE FUN!

TEMPLATE

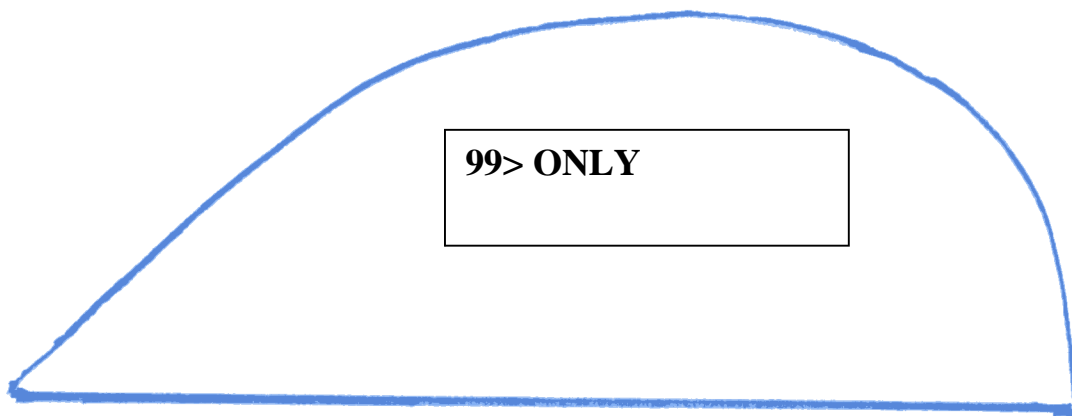

<Left (fender) end
plate>

Toward license