

# Flyin' Miata

*We make Miatas fly!*



331 South 13<sup>th</sup> Street  
Grand Junction, CO 81501  
E-mail: tech@flyinmiata.com

**970-242-3800**  
**(TECH & PRODUCT INQUIRIES)**


**800-FLY-MX5S (1-800-359-6957)**  
**(ORDERS ONLY)**

## Prop Rod Adapter Kit Installation

**Passenger side**



**Driver's side**

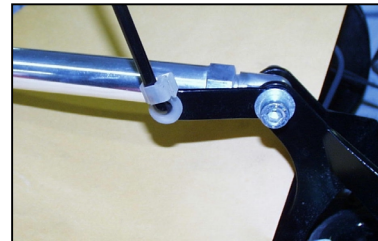

**Installed**



The hood prop brackets are installed on front of strut brace. Use the bolts that hold the crossbar to the uprights through the larger holes in the bracket. You will reuse the plastic parts that hold the factory rod to the car. The clip on the passenger's side will need slight trimming to fit the hole of the new bracket. When prop rod is installed into new brackets, the bend on the passenger's side will face down. The pivot end of the prop rod will be on the driver's side. Allen head side of bolt is on front side of car. Do not install washer that came with strut brace.